


MBT masterbatch (Thiazole accelerator)

- **2-MERCAPTOBENZOTHAZOLE**
- **Molecular Weight** : 167
- **CAS** : 149-30-4
- **EINECS** : 205-736-8

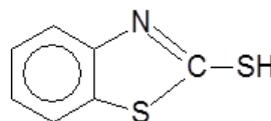

PRODUCT	Active Content (%)	Color N for Natural P for Pigment	Filtration (µm)	Mooney ML (1+4) 80°C Typical value	Density Typical value
MBT 80 GA F140	80	Light Brown* (P)	140	25	1.27 to 1.32

GA: Granules co-polymer of acetate/acrylate & polyethylene

* Depending on natural variation of MBT

ACTIVE MATERIAL TYPICAL VALUES

- Melting point : 175 °C
- Purity : 96.0%

REMARKS

Non-staining
Slightly coloring
Bitter

PROPERTIES

Mixland+® MBT masterbatch is a medium fast and scorchy accelerator for natural and synthetic rubbers. Vulcanisates accelerated with MBT tend to have low modulus, very good ageing properties and little tendency to discoloration. But care should be taken because it has a slight tendency to scorch.

It is suitable for NR, IR, BR, SBR, NBR, IIR and EPDM but is unsuitable for products connected with food due to its bitter taste. It can also be used as a retarder for sulfur-modified CR.

It readily disperses in rubbers. It is very active at temperatures above 130-135° C.

It can be used alone but low temperature curing can be achieved by the use of TMTD, TETD or DPG as secondary accelerators.

APPLICATIONS

Tire treads, carcass, wire insulation, footwear, rubber goods, tubes, hoses, toys, conveyor belts, mechanical goods, etc...

PACKAGING & STORAGE

PE bags weight : 20 kg net on Standard CP3 pallet of 640 kg net

Do not pile more than 2 pallets height

Shelf-life : **2 years** in its original packaging

Store in a dry and cool place and away from direct sources of heat or sunlight.

SAFETY & TOXICITY

For detailed information, please refer to our Material Safety Data Sheet.

NITROSAMINE FREE

MIXLAND+® MASTERBATCH ALLOWS:

- Dust free products with a high level of filtration up to 100µ
- Tack free products at room temperature
- Lower Mooney viscosity, improving quality of dispersion
- Scrap rate reduction thanks to filtration
- Wider compatibility with elastomers

The information contained in this leaflet is based on tests carried out by our laboratories and data selected from the literature but shall in no event be held to constitute or imply any warranty or undertaking. No liability whatsoever can be accepted with regard to the handling, processing or use of the products concerned, which must in all cases be employed with regard to all relevant regulations and/or legislation in the country or countries concerned.

Issued 15 dated March 2022

TECHNICAL DATA SHEET

MLPC International

209, Avenue Charles Despiau – 40370 Rion des Landes - France
Tel.: +33 (0)5 58 57 02 78 – Contact : commercial@mlpc-intl.com
<http://www.mlpc-intl.com>

ARKEMA

DISCLAIMER FOR MEDICAL DEVICE POLICY

The product described in the brochure is not Medical grade designated for Medical Device applications.

Arkema general Medical Devices Policy

Arkema has implemented an internal Medical Policy regarding the use of Arkema products in Medical Devices applications that are in contact with the body or circulating bodily fluids. Arkema has designated Medical grades to be used for such Medical Device applications. Products that have not been designated as Medical grades are not authorized by Arkema for use in Medical Device applications that are in contact with the body or circulating bodily fluids. In addition, except for limited cases as determined by the Medical Device Policy, Arkema strictly prohibits the use of any Arkema products in Medical Device applications that are implanted in the body or in contact with bodily fluids or tissues for greater than 30 days. For any use of Arkema's product in Medical Device applications, please contact Arkema's sales network.